

Volunteer Audio Installation Tips

WHAT TO DO WITH THE BLUES


If you do not have sound coming from your newly installed radio check the blue and the blue/white-stripe wires.

In the EIA standard wiring code for aftermarket radios, the blue wire provides 12 volts for a powered/amplified antenna *only* when the AM/FM radio tuner is on.

The blue/white wire provides constant 12 volts to turn on the amp for *any* source (CD, Radio, USB, etc.)

Unlike other connections where only *matching* colored wires are joined, in some situations a blue and blue/white wire may be connected.

Compare your radio's harness to the vehicle adapting harness in the chart below for proper wiring.

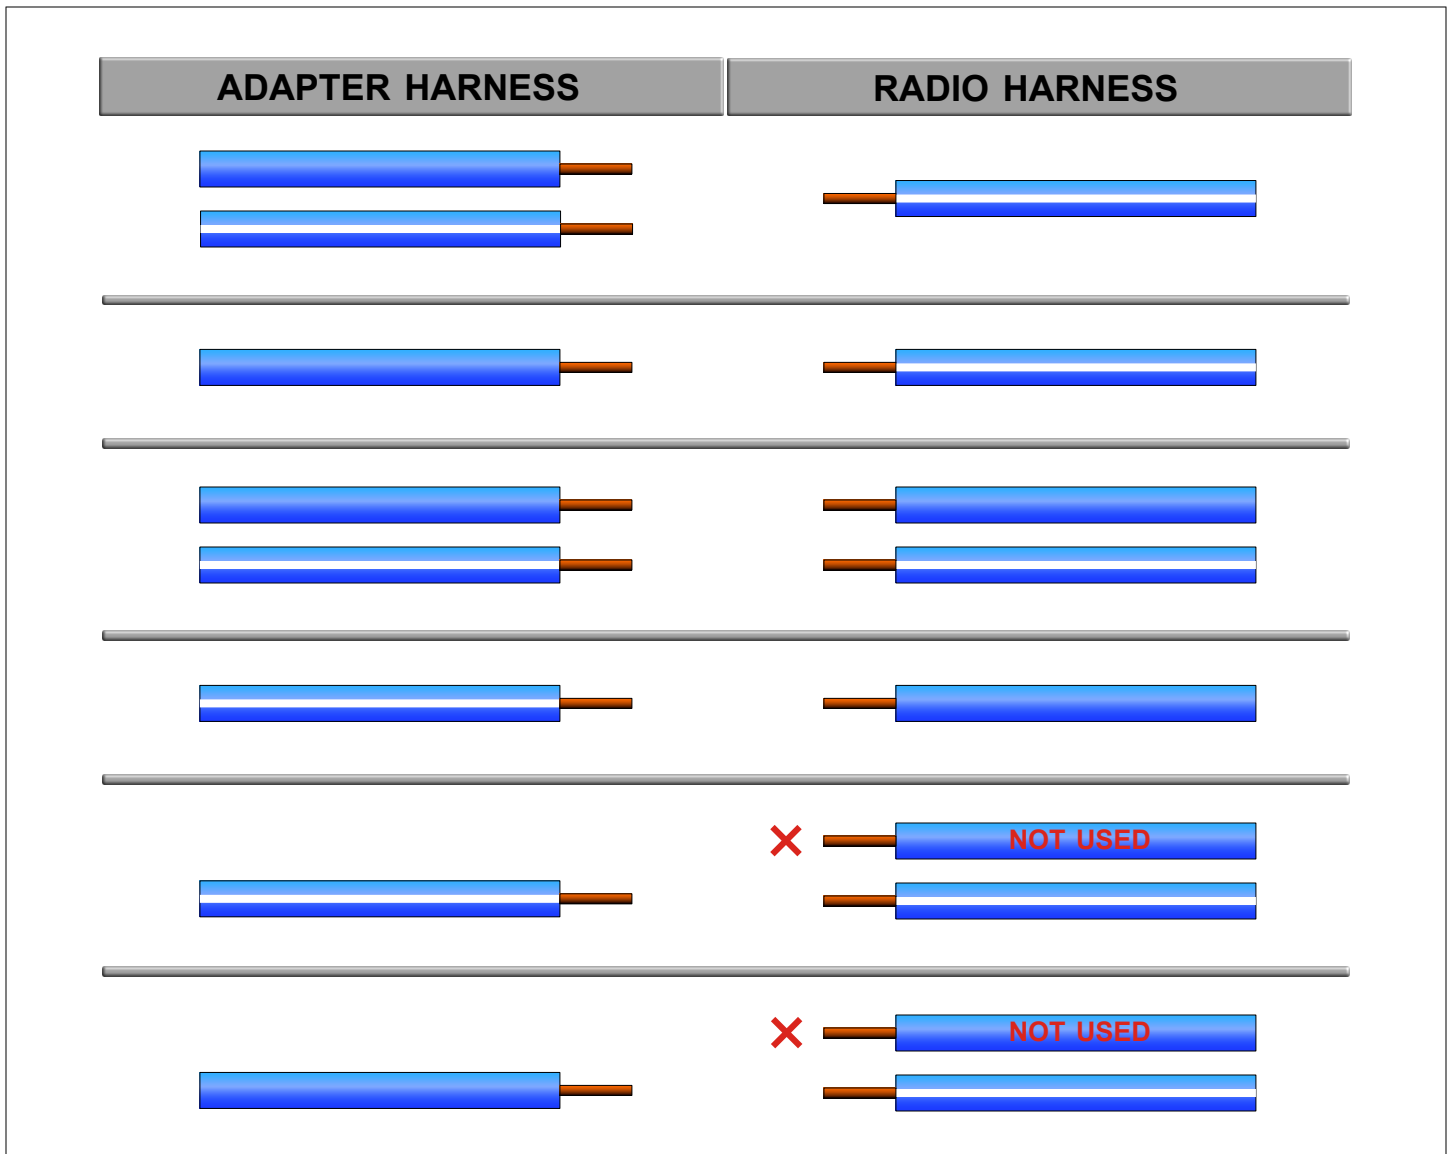

Copyright © 2016 Volunteer Audio. All Rights Reserved.